





CAUTION!

**DO NOT CLIMB, SIT OR STAND ON THE DUTCHGRAND!
KEEP HANDS ON A SAFE PLACE WHILE FOLDING LEGS IN/OUT**

Before initial set up: make sure that there is no damage caused by transport. Should there be any, consult your dealer and do not use the device.
To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the instructions and warning in this manual.

DUTCHGRAND Ltd. will not accept liability for any resulting damages caused by the non-observance of this manual, unauthorized modification or misuse of the device.

The DUTCHGRAND will support an assigned weight of max. 40 kg.

The DUTCHGRAND is a portable device. It's total weight does not exceed 22 kilograms and it's legs are collapsible.

By using the special protective cover, you will prevent scratching or any other damage on the surface of the device.

Always use the cover during transport of the DUTCHGRAND and take off the cover only when the DUTCHGRAND is set up and the legs are folded out and locked. If you are done, put the cover on first before the legs are folded in.

Use a flightcase if the DUTCHGRAND is transported as part of a touring-cargo.

DIMENSIONS

A inside width: 1420mm

B inside high: 180mm

C outside width: 1470mm

D depth on top: 840mm (total depth: 1000mm)

E height body: 250mm

F leg length: 650mm

height unfolded (E+F): 850mm


WEIGHT

27KG / 59 Lbs

MATERIALS

body: reinforced polyester

frame/legs: aluminium

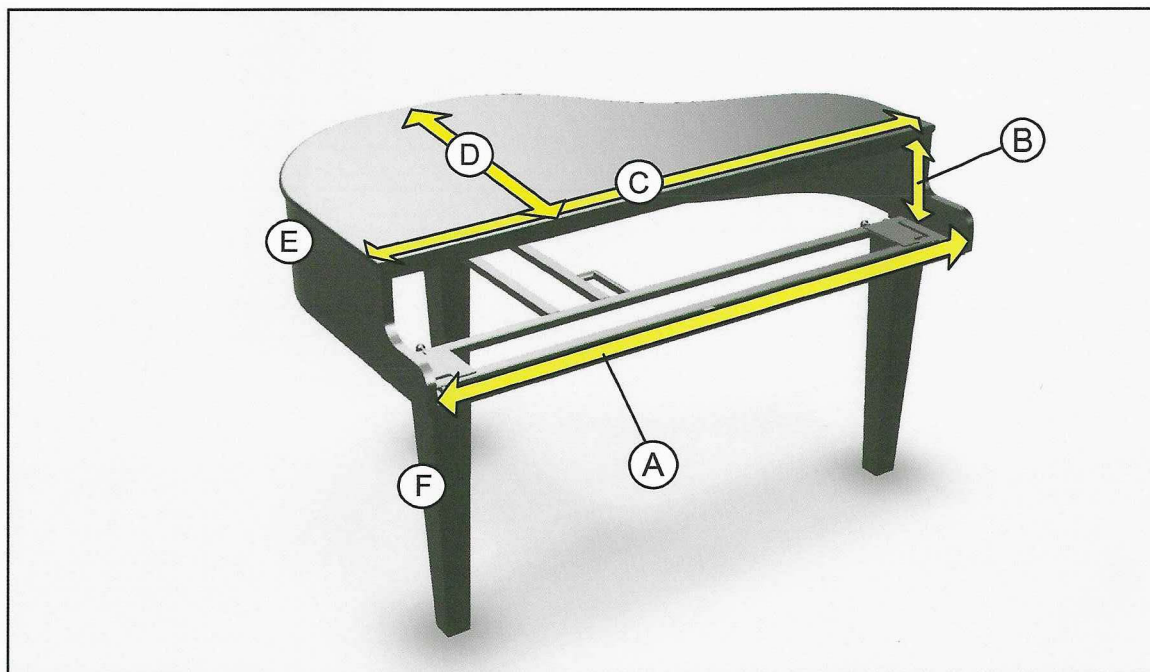

EASY & QUICK SET UP

1. put the DUTCHGRAND in the cover on it's long side or on it's back
2. untie the straps and unfold them backwards
3. unlock the legs by pulling the black round button on the side of the frame
4. take the legs and fold them outside, let go the lockbutton and keep moving the legs to their standing-position until they lock again
5. after positioning all three legs, carefully hold the DUTCHGRAND by the upperpart and put the device on it's legs
6. remove the cover
7. carefully place the desired keyboard on the frame and connect the plugs and other equipment
8. ready for use

To pack the DUTCHGRAND follow these instructions in reverse order.

To carry the DUTCHGRAND, use the grip on the frame while holding the cover with your other hand

Don't transport the DUTCHGRAND with heavy weight on top.

Keep the DUTCHGRAND and the protective cover from moist or water

Store the DUTCHGRAND in a dry place

MAINTENANCE & REPAIR

With the proper use of the cover, the device will remain in good condition. However, small damage and wear seem unavoidable on high-gloss surface. We advice to clean the surface thoroughly after use and before putting the cover back on. Use a quality cleaner spray and a microfiber cloth to wipe the device clean.

The DUTCHGRAND shell is made from glassfiber-composite and is very suitable for repair according to the available industry standards. Usually small scratching or damage can be fixed with a combination of sanding an polishing. DUTCHGRAND Ltd. is happy to provide written details and instructions for treatment (info@dutchgrand.com).

